

# Fernbedienung / Remote Control

## IR-EASY



Adresse einstellen / Set Address \*

Adresse wählen /  
Select Address

- Adr 1: TV
- Adr 2: PVR
- Adr 3: DVD
- Adr 4: EXTRA

Taste / Key	Signal	Easywave
1 :	1	1A
2 :	2	1B
3 :	3	2A
4 :	4	2B
5 :	5	3A
6 :	6	3B
7 :	7	4A
8 :	8	4B
9 :	9	5A
0 :	10	5B
	11	6A
	12	6B
	13	7A
	14	7B
	15	8A
	16	8B
	PIN 1	
	PIN 2	
	PIN 3	
	PIN 4	
	Set PIN	

\* Nicht mehr notwendig ab IR-Easy Version 2.15 /  
No longer used since IR-Easy version 2.15

# Fernbedienung / Remote Control

## IR-EASY



Adresse einstellen / *Set Address* \*

Adresse wählen / *Select Address*

- Adr 1: TV
- Adr 2: PVR
- Adr 3: DVD
- Adr 4: EXTRA

Taste / Key	Signal	Easywave
1 :	1	1A
2 :	2	1B
3 :	3	2A
4 :	4	2B
5 :	5	3A
6 :	6	3B
7 :	7	4A
8 :	8	4B
9 :	9	5A
0 :	10	5B
	11	6A
	12	6B
	13	7A
	14	7B
	15	8A
	16	8B
	PIN 1	
	PIN 2	
	PIN 3	
	PIN 4	
	Set PIN	

\* Nicht mehr notwendig ab IR-Easy Version 2.15 /  
No longer used since IR-Easy version 2.15